


Warning: DO NOT SIT, STAND OR STEP ONTO THE AIRBASE PLATFORM. DO NOT PLACE LADDER OR SET EQUIPMENT WEIGHING MORE THAN 150 POUNDS ON AIRBASE PLATFORM. The AirBase should not be used without the Kontrol Kube Mobile Platform.


Assembly Instructions:

1 - Turn Kontrol Kube wheelbase and AirBase so that the casters are facing up. Position the AirBase forks so that they line up with the wheel base channels.

2 - Slide forks completely into channels until holes in the sides of wheel base channels & AirBase forks align.

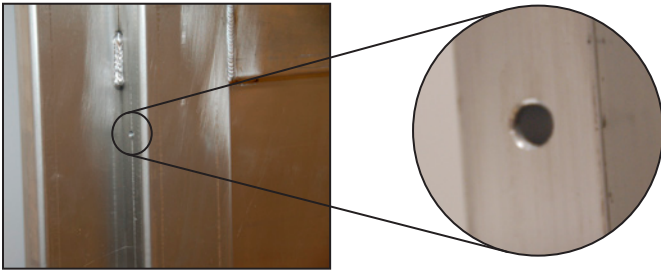

3 - Slide pins through holes and lock in place to secure AirBase to the wheelbase.

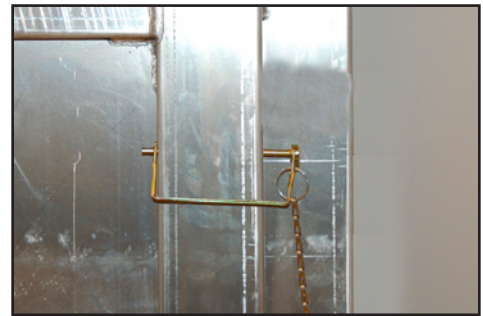

Once the AirBase is attached, the Kontrol Kube and negative air machine can quickly and easily be moved throughout the facility in unison.



Note: When using negative air machines other than the Kontrol Kube Complete Negative Air, the AirBase can be pulled out to a second position and locked in place to accommodate larger units. In this configuration the Negative Air Machine will overhang the front and back of the AirBase.